


Access Panel Fitting Instructions


Picture & Beaded Frame

1.

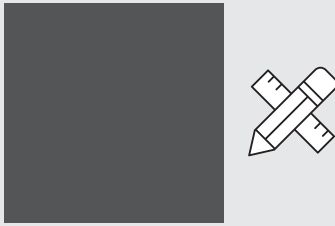


Measure and mark the opening in the wall or ceiling 5mm larger than the access panel. E.g. for a 300x300 panel, the opening should be 305x305mm.

2.

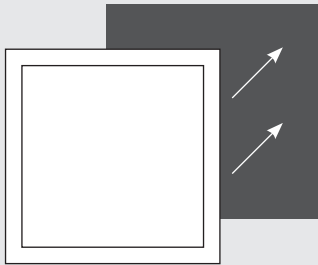


Offer the panel to the prepared cut out hole, pressing firmly into place to ensure the panel fits the cut out opening.

 3.



The panel and frame should fit flush with the wall or ceiling. Check the panel is level prior to securing to the frame.


4.

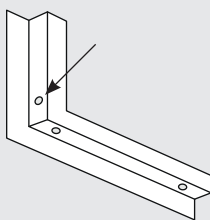

Hold the panel in place and use the pre-punched fixing holes on all sides of the frame to secure to the opening surround. Select a screw that doesn't protrude above the lip of the frame.

Beaded Frame Only

5.

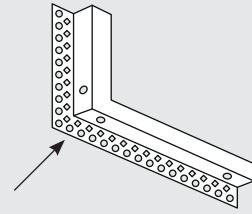

For beaded frame panels fix through the 8mm holes on the edge of the beaded frame using suitable drywall screws. Once secured tape and joint along the bead frame to prepare for smooth clean finish.

6.

Beaded Frames should be checked for excess plaster and cleaned between the door and the frame.

7.

Refer to plaster manufacturers instructions for general information on plaster skimming, tape and jointing around the beaded frame.

Picture Frame Only

8.

Picture frame panels may require a caulk or sealant around the panel edge to create an airtight seal.

Picture & Beaded Frame

9.

Open and close panel several times to confirm the panel works smoothly.