


Universal Dry Verge U System

Installation Advice


June 2024

1

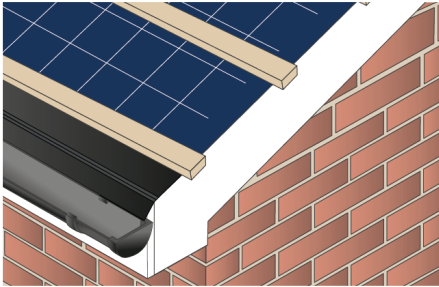

Install the tiling batten with a 30mm overhang over the brick or barge board. Remove existing mortar bedding in refurbishment projects and install new tiling batten to the underside of the existing tiling batten.

2

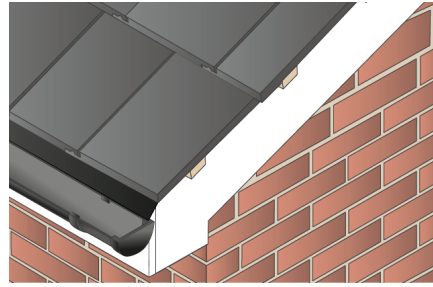

Lay tiles flush with battens. Remove existing mortar bedding in refurbishment projects.

3



Snap the starter kit off the blanking plate. Starting at the bottom edge, insert the starter piece into the front end of the verge unit. Mark starter position on barge. Remove unit and mechanically fix into position through holes provided.

4



Slide the first verge unit over the tile at the eaves and into the starter kit, fitting it under the headlap to ensure the unit is firmly held in place. Screw fix the unit through the top grid into the batten.

5




Slide the next verge unit into the upper edge of the first unit, press firmly to the tile while fitting it under the head laps to ensure the unit is firmly held in place and then nail the unit through the top grid into the batten.

6



Continue the process up along the barge board unit at the ridge. If required insert the blanking plate over the final nail grid to prevent water ingress. Finally insert the ridge cap once the verge is completed.

7

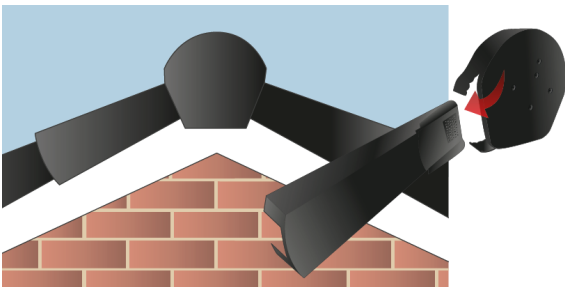

Ensure the flexible flaps on the ridge cap contour around the outside of the verge unit. Fix the ridge cap to the battens.

